

## Important Information for the User

### For your safety

If you smell gas:

1. Turn off gas cut-off tap
2. Open windows
3. Do not actuate any electric switches
4. Extinguish naked flames
5. Immediately notify gasworks

Do not store or use flammable materials or liquids near the unit.

### Maintenance

Maintenance instructions must be observed.

Have your unit inspected and, if necessary, cleaned by an expert once a year. It is essential to conclude an appropriate maintenance contract, for this will ensure the fault-free functioning and long life of your unit.



Work on the unit, particularly opening and removing functional components in the gas supply and exhaust system of the unit, may only be carried out by licensed experts.

### Malfunction

Should a malfunction occur in connection with your circulator, consult the instruction manual for appropriate action. If the malfunction cannot be eliminated after consulting the instruction manual, you must contact an expert. Do not try to repair the unit yourself.

### Cleaning of front shell:


Front shell simply to be wiped with a damp cloth. Corrosive detergents need not be used.

Robert Bosch GmbH, Junkers Division, Postfach 1309, 7314 Wernau, Germany


## Operation


### In order to operate


Set switch at 0. Open the gas shut-off valve and, if necessary, the cold water corner valve.

Before starting or repeating start push-off button  on principle.

### without piezo igniter

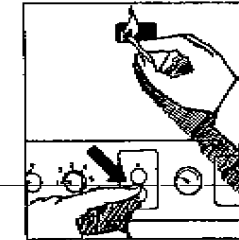


Press button  Light the gas. Hold the button pressed approx. 15 secs.

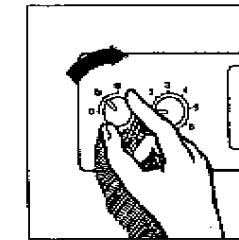


Switch


winter:   
summer\*: 

\* Clock of room thermostat keeps running

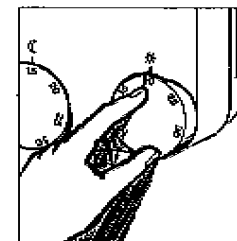



Set room thermostat to desired temperature. See operating instructions for other regulating methods.

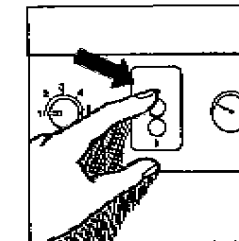


Press button  Flame goes out.


### with piezo igniter

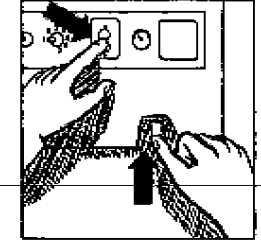

Press button  Press the piezo igniter until the flame burns. Hold the button pressed approx. 15 secs.

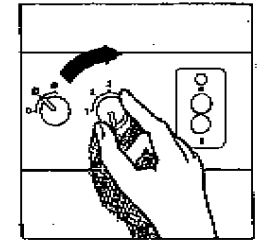

In systems with a room thermostat, set temperature selector at "7".

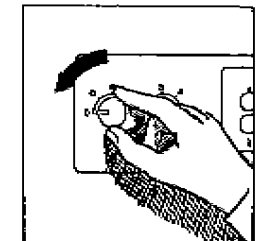

Set switch at 0. Clock of room thermostat stops running after approx. 70 h (power reserve).

### Important note:

Please take note of the section "Information for the customer" in the accompanying installation specification Ju 1099E and the operating instructions Ju 806. These forms can be obtained from your plumber.